

# RGI-SERIES Gripper

## Short Manual

### Content

|  |    |
|--|----|
| Revisions.....                                       | 1  |
| 1 Specifications.....                                | 2  |
| 1.1 Indicator .....                                  | 2  |
| 1.2 Pinout Description.....                          | 3  |
| 2 Modbus-RTU Control .....                           | 4  |
| 2.1 Wiring .....                                     | 4  |
| 2.1.1 Debugging software instructions.....           | 5  |
| 2.2 Default Communication Parameters .....           | 8  |
| 2.3 Modbus-RTU Description.....                      | 9  |
| 2.3.1 RTU Framing .....                              | 9  |
| 2.3.2 Supported Modbus Function Code.....            | 9  |
| 2.3.3 Register Mapping.....                          | 10 |
| 2.3.4 Register Description.....                      | 11 |
| 2.3.4.1 Initialization .....                         | 11 |
| 2.3.4.2 Force.....                                   | 12 |
| 2.3.4.3 Position.....                                | 13 |
| 2.3.4.4 Speed.....                                   | 13 |
| 2.3.4.5 Rotation angle .....                         | 14 |
| 2.3.4.6 Rotation speed.....                          | 15 |
| 2.3.4.7 Rotation force.....                          | 15 |
| 2.3.4.8 Initialization State .....                   | 16 |
| 2.3.4.9 Gripper State .....                          | 16 |
| 2.3.4.10 Current Position .....                      | 17 |
| 2.3.4.11 Rotating angle feedback .....               | 17 |
| 2.3.4.12 Rotating initialization state feedback..... | 17 |
| 2.3.4.13 Rotating state feedback.....                | 18 |
| 2.3.4.14 Save Parameter.....                         | 18 |
| 2.3.4.15 Initialization Direction .....              | 19 |
| 2.3.4.16 Slave Address .....                         | 19 |
| 2.3.4.17 Baud Rate .....                             | 20 |
| 2.3.4.18 Stop Bits .....                             | 20 |
| 2.3.4.19 Parity .....                                | 21 |
| 2.3.4.20 Test I/O Parameters .....                   | 21 |
| 2.3.4.21 I/O Mode Switch .....                       | 22 |
| 2.3.4.22 I/O Parameter Configuration.....            | 23 |
| 3 I/O Control .....                                  | 24 |

---

|                           |    |
|---------------------------|----|
| 3.1 Wiring .....          | 25 |
| 3.2 I/O Setting.....      | 25 |
| 3.2.1 Configure IO .....  | 25 |
| 3.2.2 Open IO.....        | 26 |
| 3.2.3 Save Settings ..... | 27 |
| 3.2.4. Restart .....      | 27 |

## Revisions

| Date     | Version | Revised content  |
|----------|---------|--|
| 20200426 | V1.0    | First edition, write wiring instructions and command instructions                        |
| 20200904 | V2.0    | Change some instructions , Update the description of IO mode                             |
| 20201010 | V2.1    | The structure of gripper is modified and the structure is lengthened. Modify the picture |
| 20210401 | V2.2    | -  |
|          |         |  |

# 1 Specifications

RGI-series is an electric rotary gripper, The number represents the Maximum stroke. The gripper is equipped with a pair of parallel fingertips, which runs symmetrically during the movement. The main structure of the gripper is a cuboid structure with three installation positions, which can meet the different installation conditions of the equipment. It is equipped with an 8-core communication interface, as shown in Figure 1.1. It has the following characteristics:

**Controllable force/position/speed/angle:** The gripper can program and adjust the grip position, grip force ,grip speed and angle.

**Multiple communication modes:** The gripper supports Modbus RTU protocol and IO mode control. Other communication protocols such as USB and ETHERNET can be transferred through protocol converter.

**Gripping detection:** The combination of force control and position control is adopted in the gripping process.

**Gripping feedback:** The state of the gripper can be read by programming, and can also be judged according to the indicator of the gripper.

**Fingertips can be customized:** Fingertips can be replaced according to situation, which is suitable for precision machining, parts assembly, and other fields.

## 1.1 Indicator


The gripper can feed back the state of the gripper in real time. In addition to the command reading, it can also be judged on the color of the indicator:

### Color description of indicator

- Uninitialize state:** Red light blinks, other lights are off.
- Initialized State:** the blue light is always on, indicating that it is in the operable state.
- Received command state:** the red light blink once quickly (because the blue light is always on at this time, the gripper indicator light will looks like a purple light).
- Object Caught state:** green light is always on, other lights are off.
- Object dropped state:** green light blinking.


## 1.2 Pinout Description

The line sequence definition on the gripper body is shown in Figure 1.1(a) and 1.1(b)

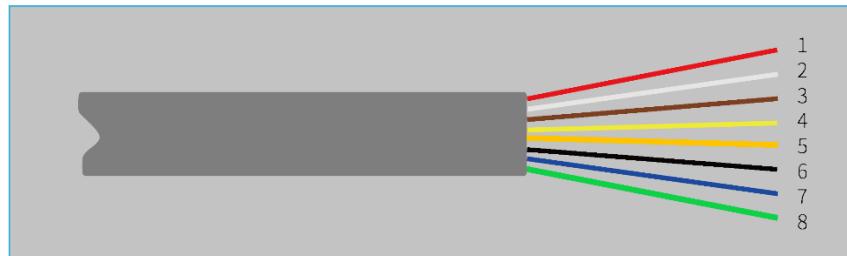

| Wire Number | The blue Wire mark corresponds to the outgoing color | Description | Explanation                       |
|-------------|--|-------------|-----------------------------------|
| 1           | Red  | 24V         | Power supply DC 24V positive      |
| 2           | White  | INPUT1      | IO mode digital input 1           |
| 3           | Brown  | INPUT2      | IO mode digital input 2           |
| 4           | Orange   | OUTPUT1     | IO mode digital output 1          |
| 5           | Yellow   | OUTPUT2     | IO mode digital output 2          |
| 6           | Black  | GND         | Power supply DC GND negative      |
| 7           | Blue   | 485_B       | Communication line negative, T/R- |
| 8           | Green  | 485_A       | Communication line positive, T/R+ |

Figure 1.1 (a) The blue line marked diagram

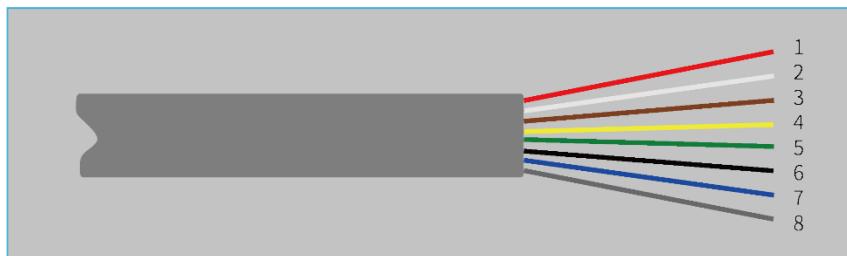

| Wire number | The yellow Wire mark corresponds to the outgoing color | Description | Explanation                       |
|-------------|--|-------------|-----------------------------------|
| 1           | Red  | 24V         | Power supply DC 24V positive      |
| 2           | White  | INPUT1      | IO mode digital input 1           |
| 3           | Brown  | INPUT2      | IO mode digital input 2           |
| 4           | Yellow   | OUTPUT1     | IO mode digital output 1          |
| 5           | Green  | OUTPUT2     | IO mode digital output 2          |
| 6           | Black  | 485_A       | Communication line positive, T/R+ |
| 7           | Blue   | 485_B       | Communication line positive, T/R- |
| 8           | Grey/Pink  | GND         | Power supply DC GND negative      |

Figure 1.1 (b) The yellow line marked diagram

**Note:** Please distinguish the wire sequence according to the wire mark. If the wire mark is lost, dropped, or forgotten, please contact our staff to cooperate in determining the wire sequence. If you do not contact our staff, the clamping jaws will be damaged due to the wrong wiring sequence, and you will be responsible for the consequences.

## 2 Modbus-RTU Control

### 2.1 Wiring

Use the provided RS-485 to USB converter (see the schematic in Figure 1.1 below) to plug into a PC or other Controllers.

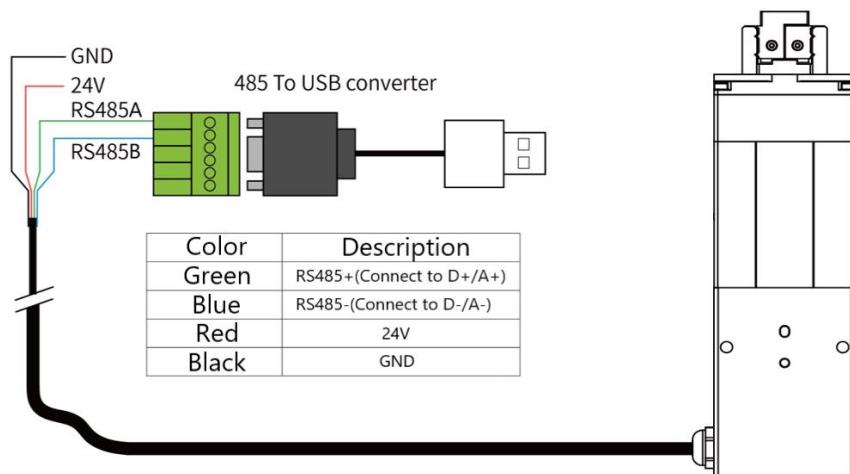


Figure 2.1 RS485 Connection

#### Wiring instructions

- ① : when the device (computer) has RS485 interface, the communication can be directly connected to RS485\_A and RS485\_B communication lines without transferring to 485 module through USB
- ② : in this way, other serial port debugging software (such as MODBUS poll) can be used for debugging

Software can be downloaded on the official website. Software and driver are integrated in the process of software installation, and both are installed together. It is recommended to check the create shortcut during installation.

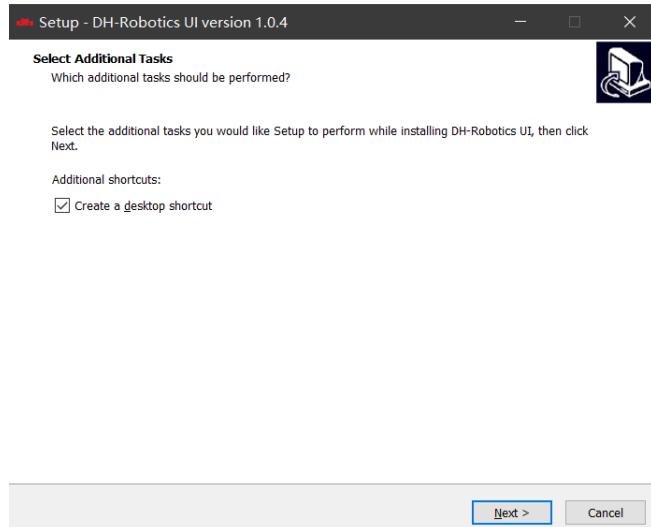


Figure 2.2 (a) installation interface 1



Figure 2.2 (b) driver installation interface

### 2.1.1 Debugging software instructions

Before use, it is necessary to connect the corresponding wiring according to the instructions. Open the software, the software will automatically identify the serial port, baud rate, ID number and other information of the gripper for automatic connection. As shown in the figure below:

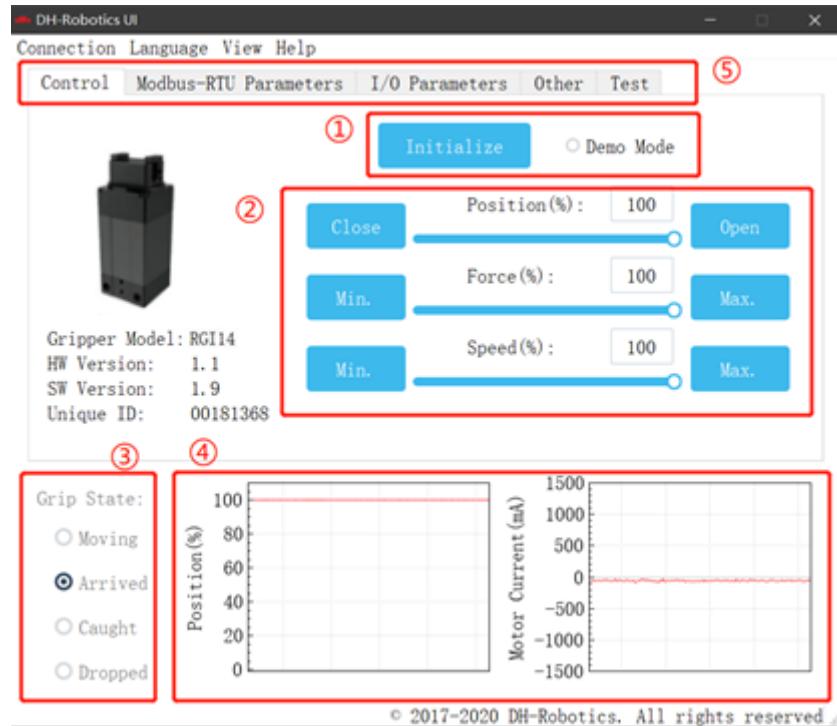


Figure 2.3 main control interface

The specific interface description is as follows:

#### Interface description

- ① **Initialization and demonstration mode:** the gripper needs to be initialized before operation to calibrate the zero point. The demonstration mode is a cyclic program.
- ② **Control interface:** it can control the position, force and speed of the gripper.
- ③ **Clamping status:** real time display of clamping status of clamping claw.
- ④ **Position current real time graph:** real time display position and current. The current represents the current of the internal motor, not the current actually consumed by the gripper. The current real-time graph can reflect the stability of clamping force.
- ⑤ **Parameter setting:** the configuration parameters of Modbus RTU, such as baud rate and check bit, can be configured; IO mode is to configure the parameters related to IO mode;

The gripper body uses Modbus RTU for communication, and can read and write data into the register. The data can be read and written at the view register. The data includes control, feedback, user parameters and I/O parameters as shown in the following figure:

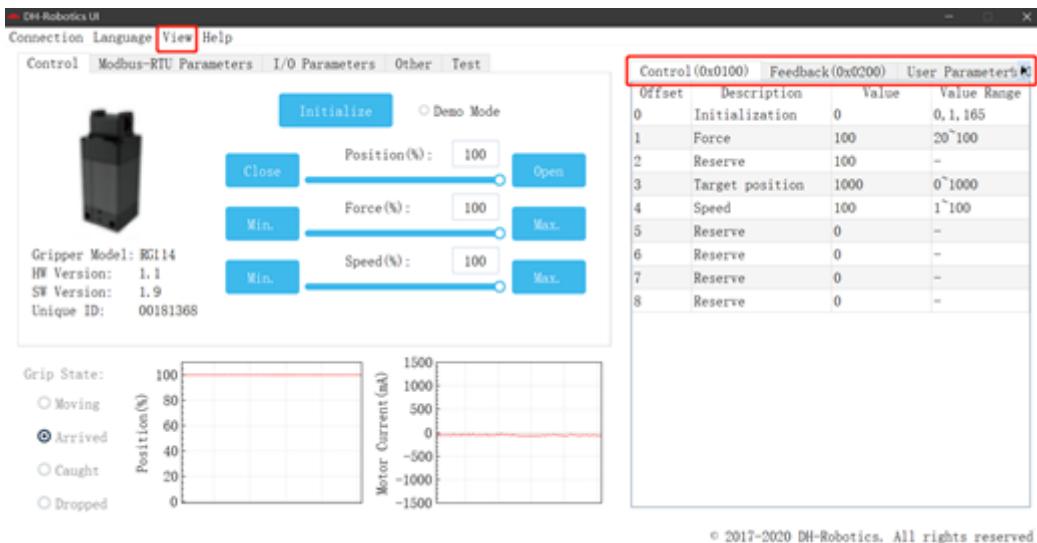


Figure 2.4 View

If there are multiple 485 devices, sometimes the baud rate and ID number of the gripper need to be modified, the parameters can be modified in Modbus RTU parameters

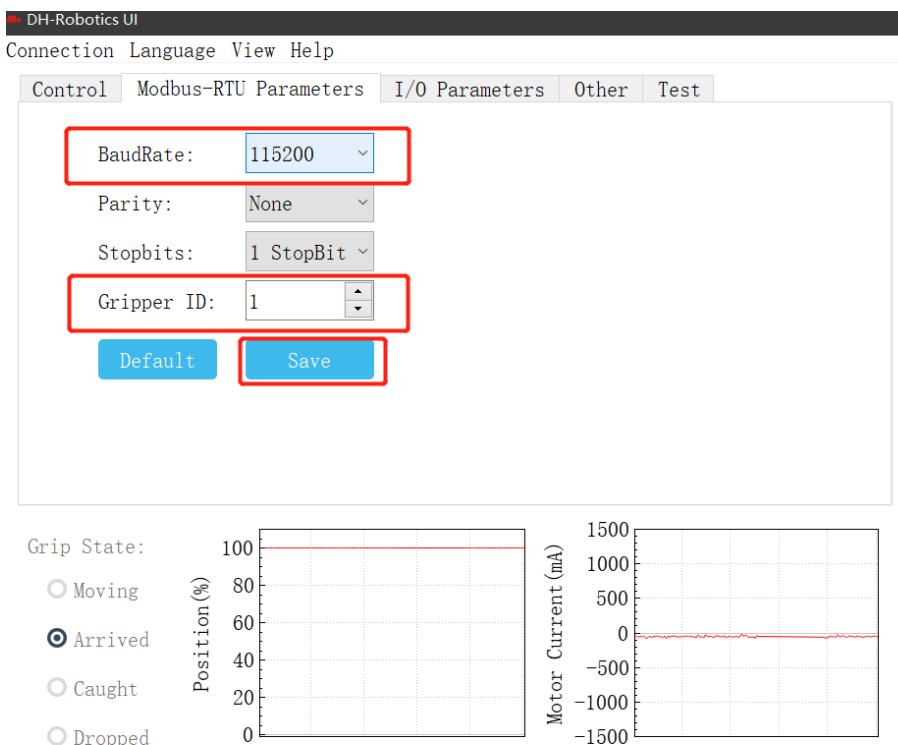


Figure 2.5 Modbus RTU parameters

You can set and configure the gripper I / O parameters in [I / O parameters]. After modifying the parameters, please click Save button to save. The following figure shows the operation of opening IO mode:

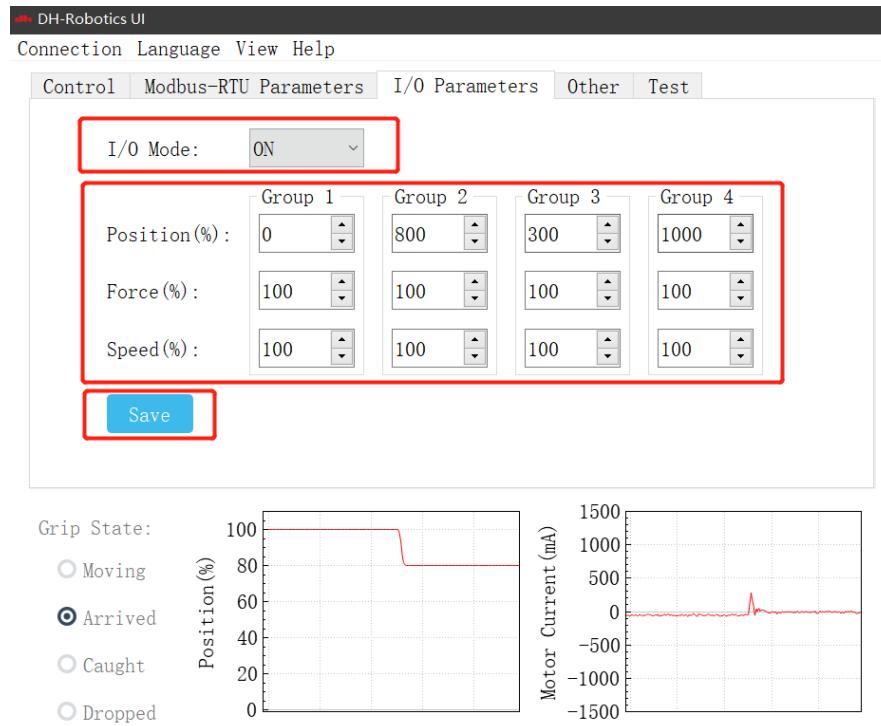


Figure 2.6 Modbus RTU parameters

The steps of switching IO are as follows:

#### Steps to switch IO mode

- ① **Open IO mode:** open IO mode first.
- ② **Configure four groups of IO parameters:** set the four groups of parameters of gripper, including position, force and speed.
- ③ **Save:** click the Save button to write the parameters to the internal register of flash, and restart to control.
- ④ **Restart:** after the restart, the switch to IO mode is successful. You can control the gripper according to the input signal, and the running status will be fed back through output.

## 2.2 Default Communication Parameters

Slave Address : 1  
 Baud Rate : 115200  
 Data Bits : 8 bits  
 Stop Bits : 1 stop bit  
 Parity : None

## 2.3 Modbus-RTU Description

### 2.3.1 RTU Framing

This gripper uses the standard Modbus-RTU protocol.

In RTU mode, the first field is the device address. The allowable characters transmitted for all fields are hexadecimal 0 ... 9, A ... F. Networked devices monitor the network bus continuously, including during the silent intervals. When the first field (the address field) is received, each device decodes it to find out if it is the addressed device.

A typical message frame is shown in Table 2.1.

Table 2.1 RTU Framing (Function Code:0x06)

| Slave Address | Function | Register address | Register data | CRC   |
|---------------|----------|------------------|---------------|-------|
| 01            | 06       | 01 00            | 00 01         | 49 F6 |

**Slave Address:** The Slave address of the gripper. The default is 1, you can also modify it through write different value to Slave Address register.

**Function:** The Function Code field tells the addressed slave what function to perform. Includes read or write registers function.

**Register address:** Specifies which registers reference to be written.

**Register data:** Specifies which value to be written. Each register (word - 16 bits) of the Modbus RTU protocol is composed of 2 bytes (8 bits) from the Gripper.

**CRC:** the CRC error-checking field contains a 16-bit value implemented as two eight-bit bytes. The CRC field is appended to the message as the last field in the frame. The low-order byte of the field is appended first, followed by the high-order byte. The CRC high-order byte is the last byte to be sent in the message.

### 2.3.2 Supported Modbus Function Code

This griper uses MODBUS- RTU. The following function codes are currently supported:

03 (HEX): Read Holding Registers

06 (HEX): Write Single Register

10 (HEX): Write Multiple Registers

### 2.3.3 Register Mapping

The gripper's Modbus-RTU registers consist of two types of registers: **the basic control registers** and **the configuration registers**.

**Basic control registers:** initialization, force setting, reference position, speed, and some states.

**Configuration registers:** gripper's parameter configuration. Includes Modbus communication parameters and I/O parameters.

Table 2.2 Basic Control register map

| Function                                | high-byte | low-byte | Description                             | Write   | Read   |
|---|-----------|----------|---|---|--|
| Initialization                          | 0x01      | 0x00     | Initialize the gripper                  | 0x01: initialization;<br>0xA5: Fully initialization | Current setting  |
| Force                                   |           | 0x01     | Gripper's force                         | 20-100 (%)  | Force currently set  |
| Reserved                                |           | 0x02     | -                                       | -   | -  |
| Position                                |           | 0x03     | Position                                | 0-1000 (%)  | Reference position currently set   |
| Speed                                   |           | 0x04     | Speed                                   | 1-100 (%)   | Speed currently set  |
| Rotation angle                          |           | 0x05     | Rotate to the specified angle.          | -32768-32767,angle value.                           | Read the current setting   |
| Reserved                                |           | 0x06     | -                                       | -   | -  |
| Rotation speed                          |           | 0x07     | Rotate at a set speed.                  | 1-100%  | Read the current setting.  |
| Rotation force                          |           | 0x08     | Rotate at a set force.                  | 20-100%   | Read the current setting.  |
| Initialization state                    |           | 0x00     | Initialization state of the gripper     | Read Only   | 0: Uninitialized;<br>1: Initialized<br>2: Initializing   |
| Gripper state                           | 0x02      | 0x01     | Gripper state                           | Read Only   | 0: In motion;<br>1: Reach position;<br>2:object caught;<br>3: Object dropped                                   |
| Position                                |           | 0x02     | gripper position                        | Read Only   | Current actual position  |
| Rotating angle feedback.                |           | 0x08.    | Feedback on the current rotation angle. | Cannot be written.                                  | Read the current value.  |
| Rotating initialization state feedback. |           | 0x0A.    | Feedback rotation initialization state. | Cannot be written.                                  | 0:Uninitialized;<br>1:Initialized successfully.<br>2: Initializing   |
| Rotating state feedback.                |           | 0x0B.    | Feedback rotation state.                | Cannot be written.                                  | 0: In motion,<br>1 : reaching the angle;<br>2: blocking;<br>3: blocked during reaching the specified position. |

Table 2.3 Configuration register map

| Function                    | High byte | Low bytes | Description                        | Write  | Read            |
|-----------------------------|-----------|-----------|------------------------------------|--|-----------------|
| Save Parameter              | 0x03      | 0x00      | Save all the parameters            | 0: default, 1: Write all parameters to save                      | 0               |
| Initialization direction    |           | 0x01      | Configure initialization direction | 0: Open, 1:Close (default: 0)                                    | Current setting |
| Slave Address               |           | 0x02      | Configure gripper Modbus address   | 0-255 (default: 1)   | Current setting |
| Baud Rate                   |           | 0x03      | Configure gripper Modbus Baud rate | 0-5: 115200, 57600, 38400, 19200, 9600, 4800 (default: 0)        | Current setting |
| Stop Bits                   |           | 0x04      | Configure gripper Modbus stop bits | 0: 1 stop bit;<br>1: 2 stop bits (default: 0)                    | Current setting |
| Parity                      |           | 0x05      | Configure gripper Modbus Parity    | 0: None parity;<br>1: Odd parity;<br>2: Even parity (default: 0) | Current setting |
| I/O Parameters Test         | 0x04      | 0x00      | Test I/O parameters                | 1; 2; 3; 4   | Current setting |
| I/O Mode Switch             |           | 0x02      | I/O control switch                 | 0: OFF, 1: ON  | Current setting |
| I/O Parameter Configuration |           | 0x05-0x10 | Four groups of I/O parameters      | position 1, force 1, speed 1 to position 4, force 4, speed 4     | Current setting |

## 2.3.4 Register Description

### 2.3.4.1 Initialization

This register is used to initialize the gripper.

Write: If write 1 (0x01 hex) to this register, the gripper will be initialized (fingers move to the minimal or maximum position and rotation to find the 0 degree). The initialization direction depends on the value of initialization direction register. If write 165 (0xA5 hex) to this register will fully initialize the gripper (find the minimal and maximum position).

Read: if gripper need to be initialized or have initialized, this register value is 0; and if gripper is in initializing process, this register value is 1.

The register address is 0x0100. The description of this register is shown in Table 2.4.

Table 2.4 Initialization

| Function       | Address | Description            | Write                                       | Read            |
|----------------|---------|------------------------|---|-----------------|
| Initialization | 0x0100  | Initialize the gripper | 0x01: initialize;<br>0xA5: Fully initialize | Current setting |

**The gripper needs to be initialized before control.**

The sample command is as follows:

Initialize (write):

Send: 01 06 01 00 01 49 F6

Receive: 01 06 01 00 01 49 F6

Reinitialize(write):

Send: 01 06 01 00 00 A5 48 4D

Receive: 01 06 01 00 00 A5 48 4D

### 2.3.4.2 Force

This register is used to set Force. It defines the current for the Gripper. If the current limit is exceeded, the fingers stop and trigger an object detection.

The address is 0x0101. The description of this register is shown in Table 2.5.

Table 2.5 Force

| Function | Address | Description             | Write      | Read                |
|----------|---------|-------------------------|------------|---------------------|
| Force    | 0x0101  | Gripper's closing force | 20-100 (%) | Force currently set |

The force value range is 20-100, the corresponding value is 00 14-00 64(Hexadecimal).

Example:

Set 30% closing force (write):

Send: 01 06 01 01 1E 59 FE

Return: 01 06 01 01 1E 59 FE

Read the closing force currently set (read):

Send: 01 03 01 01 00 01 D4 36

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.3 Position

This register is used to set the reference position of gripper's fingers, then the fingers will move to the position immediately.

The address is 0x0103. The description of this register is shown in Table 2.6.

Table 2.6 Position

| Function | Address | Description        | Write      | Read                             |
|----------|---------|--------------------|------------|----------------------------------|
| Position | 0x0103  | Reference Position | 0-1000 (%) | Reference position currently set |

The reference position value range is 0-1000 (%), the corresponding value is 00 00 – 03 E8(Hexadecimal).

Example:

Set 500% position (write):

Send: 01 06 01 03 01 F4 78 21

Return: 01 06 01 03 01 F4 78 21

Read the reference position currently set(read):

Send: 01 03 01 03 00 01 75 F6

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.4 Speed

This register is used to set the Gripper closing and opening speed.

The address is 0x0104. The description of this register is shown in Table 2.7.

Table 2.7 Speed Instructions

| Function | Address | Description | Write     | Read                |
|----------|---------|-------------|-----------|---------------------|
| Speed    | 0x0104  | Speed       | 1-100 (%) | Speed currently set |

The speed value range is 1-100 , The corresponding value is 00 01 – 00 64(Hexadecimal).

Example:

Set 50% speed (write):

Send: 01 06 01 04 00 32 48 22

Return: 01 06 01 04 00 32 48 22

Read the current speed (read):

Send: 01 03 01 04 00 01 C4 37

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.5 Rotation angle

This register is used to set the gripper angle of rotation.

The address is 0x0105. The description of this register is shown in Table 2.8.

Table 2.8 The angle of rotation

| Function       | Address | Description                    | Write        | Read                     |
|----------------|---------|--------------------------------|--------------|--------------------------|
| Rotation angle | 0x0105  | Rotate to the specified angle. | -32768-32767 | Read the current setting |

The angle of rotation is -32768-32767, The corresponding value is 0xF000 – 0x7FFF(Hexadecimal).

Example:

Set 180% angle (write):

Send: 01 06 01 05 00 B4 98 40

Return: 01 06 01 05 00 B4 98 40

Read the current angle (read):

Send: 01 03 01 05 00 01 95 F7

Return: 01 03 02 xx xx crc1 crc2

#### Be careful

- **Rotation angle is represented by a reverse code.**

If the rotation angle is positive, the reverse code of positive number is the same as the original code.

For example, the inverse code of 360° is 0168 (0x).

Set 360% angle: 01 06 01 05 01 68 98 49

When the rotation angle is negative, the inverse code of negative number is the reverse of positive number bit by bit, and the sign bit is 1.

For example, the inverse code of - 360° is FE97 (0x).

Set -360% angle: 01 06 01 05 Fe 97 99 F9

### 2.3.4.6 Rotation speed

This register is used to set the speed of rotation.

The address is 0x0107. The description of this register is shown in Table 2.9.

Table 2.9 The speed of rotation

| Function       | Address | Description            | Write  | Read                      |
|----------------|---------|------------------------|--------|---------------------------|
| Rotation speed | 0x0107  | Rotate at a set speed. | 1-100% | Read the current setting. |

The speed of rotation is 1-100(%), The corresponding value is 0x0001 –0x0064(Hexadecimal).

Example:

Set 50% rotation speed (write):

Send: 01 06 01 07 00 32 B8 22

Return: 01 06 01 05 00 B4 B8 22

Read the current speed (read):

Send: 01 03 01 07 00 01 34 37

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.7 Rotation force

This register is used to set the force of rotation.

The address is 0x0108. The description of this register is shown in Table 2.10.

Table 2.9 The force of rotation

| Function        | Address | Description           | Write   | Read                      |
|-----------------|---------|-----------------------|---------|---------------------------|
| Rotation force. | 0x0108  | Rotate at a set force | 20-100% | Read the current setting. |

The force of rotation is 20-100(%), The corresponding value is 0x0014 –0x0064(Hexadecimal).

Example:

Set 50% force (write):

Send: 01 06 01 08 00 32 88 21

Return: 01 06 01 05 00 B4 88 21

Read the current force (read):

Send: 01 03 01 07 00 01 34 37

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.8 Initialization State

This register is used to store current initialization state of gripper, you can get the initialization state by reading this register.

The address is 0x0200. The description of this register is shown in Table 2.11.

Table 2.11 Initialization State

| Function             | Address | Description                         | Write     | Read   |
|----------------------|---------|-------------------------------------|-----------|--|
| Initialization State | 0x0200  | Initialization state of the gripper | Read Only | 0: Uninitialized;<br>1: Initialized<br>2: Initializing |

Example:

Read initialization state (read):

Send: 01 03 02 00 00 01 85 B2

Return: 01 03 02 00 00 B8 44

### 2.3.4.9 Gripper State

This register is used to store the Gripper state, you can get the state of gripper by reading this register.

And the address is 0x0201. The description of this register is shown in Table 2.12.

Table 2.12 Gripper State

| Function      | Address | Description       | Write     | Read  |
|---------------|---------|-------------------|-----------|---|
| Gripper State | 0x0201  | the gripper state | Read Only | 0: In motion;<br>1: Reached position;<br>2: Object caught;<br>3: Object dropped |

#### States Description

Different values indicate different states of the gripper. The descriptions of states are as follows:

- 00: Fingers are in motion .
- 01: Fingers are at reference position. No object detected or object has been dropped.
- 02: Fingers have stopped due to an object detection.
- 03: Fingers are at reference positon due to object has been dropped after the gripper caught object.

Example:

Read gripper state (read):

Send: 01 03 02 01 00 01 D4 72

Return: 01 03 02 00 02 39 85(02: object caught)

### 2.3.4.10 Current Position

This register is used to store the Actual position of the Gripper.

The address is 0x0202. The description of this register is shown in Table 2.13.

Table 2.13 Current Position

| Function         | Address | Description             | Write     | Read                    |
|------------------|---------|-------------------------|-----------|-------------------------|
| Current Position | 0x0202  | Gripper actual position | Read Only | Current actual position |

Example:

Read actual position (read):

Send: 01 03 02 02 00 01 24 72

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.11 Rotating angle feedback

This register is used to store the Actual rotating angle of the Gripper.

The address is 0x0208. The description of this register is shown in Table 2.14.

Table 2.14 Rotating angle feedback.

| Function                 | Address | Description                             | Write              | Read                    |
|--------------------------|---------|---|--------------------|-------------------------|
| Rotating angle feedback. | 0x0208. | Feedback on the current rotation angle. | Cannot be written. | Read the current value. |

Example:

Read actual rotation angle (read):

Send: 01 03 02 08 00 01 04 70

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.12 Rotating initialization state feedback.

This register is used to store the Rotating initialization state feedback. of the Gripper.

The address is 0x020A. The description of this register is shown in Table 2.15.

Table 2.15 Rotating initialization state feedback.

| Function                                | Address | Description                             | Write              | Read   |
|---|---------|---|--------------------|--|
| Rotating initialization state feedback. | 0x020A. | Feedback rotation initialization state. | Cannot be written. | 0:Uninitialized;<br>1:Initialized.<br>2:Initializing |

Example:

Read actual Rotating initialization state feedback (read):

Send: 01 03 02 0A 00 01 A5 B0

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.13 Rotating state feedback.

This register is used to store the Rotating state feedback. of the Gripper.

The address is 0x020B. The description of this register is shown in Table 2.16.

Table 2.16 Rotating state feedback.

| Function                 | Address | Description              | Write              | Read   |
|--------------------------|---------|--------------------------|--------------------|--|
| Rotating state feedback. | 0x020B. | Feedback rotation state. | Cannot be written. | 0: In motion,<br>1 : reaching the position;<br>2: blocking;<br>3: had been blocked during reaching the specified position. |

Example:

Read actual Rotating state feedback (read):

Send: 01 03 02 08 00 01 04 70

Return: 01 03 02 xx xx crc1 crc2

### 2.3.4.14 Save Parameter

This register is used to Save Parameter.

Write 1 to this register to save all parameter, If you modified the I/O or communication parameters.

The address is 0x0300. The description of this register is shown in Table 2.17.

Table 2.17 Save Parameter

| Function       | Address | Description                    | Write                                 | Read |
|----------------|---------|--------------------------------|---------------------------------------|------|
| Save Parameter | 0x0300  | Save register's value to Flash | 0: default,<br>1: Save all parameters | 0    |

Example:

Save Parameter (Write):

Send: 01 06 03 00 00 01 48 4E

Return: 01 06 03 00 00 01 48 4E

#### NOTE

- The Saving process will take 1-2 seconds, and the gripper won't response to other command during this process. The gripper will response this command after saving process finished.

### 2.3.4.15 Initialization Direction

This register is used to set Initialization Direction of gripper.

The address is 0x0301. The description of this register is shown in Table 2.18.

Table 2.18 Baud Rate

| Function  | Address | Description                        | Write                            | Read            |
|-----------|---------|------------------------------------|----------------------------------|-----------------|
| Baud Rate | 0x0301  | Configure initialization direction | 0: Open, 1:Close<br>(default: 0) | Current setting |

The value of this register is 0 by default.

If the register value is 0, when you send the initialization command, the gripper finger will open and find the maximum position.

If the register value is 1, when you send the initialization command, the gripper finger will close and find the minimal position.

Example:

Write 0 to initialization direction register:

Send: 01 06 03 01 00 00 D8 4E

Return: 01 06 03 01 00 00 D8 4E

### 2.3.4.16 Slave Address

This register is used to set Slave Address of gripper.

The address is 0x0302. The description of this register is shown in Table 2.19.

Table 2.19 Slave Address

| Function      | Address | Description                     | Write              | Read            |
|---------------|---------|---------------------------------|--------------------|-----------------|
| Slave Address | 0x0302  | Configure gripper Slave Address | 0-255 (default: 1) | Current setting |

The value of this register is 1 by default.

Example:

Set the Slave Address to 1 (write):

Send: 01 06 03 02 00 01 E9 8E

Return: 01 06 03 02 00 01 E9 8E

#### NOTE

- Please make sure that no other networked device has the same slave address as the gripper.

### 2.3.4.17 Baud Rate

This register is used to set Baud Rate of gripper.

The address is 0x0303. The description of this register is shown in Table 2.20.

Table 2.20 Baud Rate

| Function  | Address | Description                           | Write   | Read            |
|-----------|---------|---------------------------------------|---|-----------------|
| Baud Rate | 0x0303  | Configure gripper<br>Modbus Baud rate | 0-5: 115200, 57600,<br>38400, 19200, 9600,<br>4800 (default: 0) | Current setting |

The value of this register is 0 by default, corresponding to a baud rate of 115200.

Example:

Set gripper baud rate to 115200 (write):

Send: 01 06 03 03 00 00 79 8E

Return: 01 06 03 03 00 00 79 8E

### 2.3.4.18 Stop Bits

This register is used to set Stop Bits of gripper.

The address is 0x0302. The description of this register is shown in Table 2.21.

Table 2.21 Stop bits settings

| Function  | Address | Description                           | Write   | Read            |
|-----------|---------|---------------------------------------|---|-----------------|
| Stop Bits | 0x0304  | Configure gripper<br>Modbus stop bits | 0: 1 stop bit<br>1: 2 stop bits<br>(default: 0) | Current setting |

The value of this register is 0 by default, corresponding to 1 stop bit.

Example:

Set the gripper stop bit to 1 stop bit (write):

Send: 01 06 03 04 00 00 C8 4F

Return: 01 06 03 04 00 00 C8 4F

### 2.3.4.19 Parity

This register is used to set Parity of gripper.

The address is 0x0305. The description of this register is shown in Table 2.22.

Table 2.22 Parity

| Function | Address | Description                     | Write  | Read            |
|----------|---------|---------------------------------|--|-----------------|
| Parity   | 0x0305  | Configure gripper Modbus Parity | 0: None Parity<br>1: Odd Parity<br>2: Even Parity<br>(default : 0) | Current setting |

The value of this register is 0 by default, corresponding to None Parity.

Example:

Set the gripper's Parity to None Parity (write):

Send: 01 06 03 05 00 00 99 8F

Return: 01 06 03 05 00 00 99 8F

### 2.3.4.20 Test I/O Parameters

This register is used to test the I/O Parameters.

The address is 0x0400. The description of this register is shown in Table 2.23.

Table 2.23 I/O Control

| Function            | Address | Description         | Write      | Read            |
|---------------------|---------|---------------------|------------|-----------------|
| Test I/O Parameters | 0x0400  | Test I/O Parameters | 1; 2; 3; 4 | Current setting |

This register can be used to directly test 4 groups of I/O parameters through Modbus-RTU to ensure that the I/O parameters are appropriate. For example, Write 1 to this register, the gripper will execute action with the first group of I/O parameter.

Example:

Control gripper by using first group of I/O parameter (write):

Send: 01 06 04 00 00 01 49 3A

Return: 01 06 04 00 00 01 49 3A

### 2.3.4.21 I/O Mode Switch

This register is used to turn I/O Control Mode ON or OFF.

The address is 0x0402. The description of this register is shown in Table 2.24

Table 2.24 I/O Mode Switch

| Function        | Address | Description        | Write         | Read            |
|-----------------|---------|--------------------|---------------|-----------------|
| I/O Mode Switch | 0x0402  | I/O Control Switch | 0: OFF, 1: ON | Current setting |

If you have written 1 to this register and have saved all parameters, the gripper will be initialized automatically after power on.

When the I/O Control Mode is turned on, the gripper can respond to Modbus-RTU commands and I/O, but I/O has priority.

The control method in different mode is shown in Table 2.252.

Table 2.25 Control method

| Switch State | Description          | Modbus-RTU | I/O |
|--------------|----------------------|------------|-----|
| 0            | I/O control mode off | YES        | No  |
| 1            | I/O control mode on  | YES        | YES |

Example:

Set the I/O control mode switch off (write):

Send: 01 06 04 02 00 00 29 3A

Return: 01 06 04 02 00 00 29 3A

**NOTE**

- If you just need to control the gripper through Modbus RTU, you should write 0 to this register and save all parameters to turn off the I/O control mode.

### 2.3.4.22 I/O Parameter Configuration

Those registers are used to Set the I/O Parameters.

The address is 0x0405-0x0410. The description of this register is shown in Table 2.26.

Table 2.26 I/O Parameter Configuration

| Function    | High-byte | Low bytes | Description      | Write        | Read            |
|-------------|-----------|-----------|------------------|--------------|-----------------|
| I/O Group 1 | 0x04      | 0x05      | position 1       | 0-1000%      | Current setting |
|             |           | 0x06      | force 1          | 20-100 %     |                 |
|             |           | 0x07      | speed 1          | 1-100 %      |                 |
|             |           | 0x08      | position 2       | 0-1000%      |                 |
| I/O Group 2 | 0x04      | 0x09      | force 2          | 20-100 %     | Current setting |
|             |           | 0x0A      | speed 2          | 1-100 %      |                 |
|             |           | 0x0B      | Rotation angle 1 | -32768-32767 |                 |
|             |           | 0x0C      | Rotation speed 1 | 1-100 %      |                 |
| I/O Group 3 | 0x04      | 0x0D      | Rotation force 1 | 20-100 %     | Current setting |
|             |           | 0x0E      | Rotation angle 2 | -32768-32767 |                 |
|             |           | 0x0F      | Rotation speed 2 | 1-100 %      |                 |
|             |           | 0x10      | Rotation force 2 | 20-100 %     |                 |

IO parameter configuration can be used to configure IO parameters. Take the first set of target position as 300, target force as 30% and target speed as 30% as an example

Example:

Set the first group of I/O parameter (write) :

Send: 01 06 04 05 01 2C 98 B6 (Reference position: 300%)

Return: 01 06 04 05 01 2C 98 B6

Send: 01 06 04 06 00 1E E8 F3 (Force: 30%)

Return: 01 06 04 06 00 1E E8 F3

Send: 01 06 04 07 00 1E B9 33 (Speed: 30%)

Return: 01 06 04 07 00 1E B9 33

IO parameter address is continuous address, and four groups of IO parameters can be configured at one time by using the function code of 0x10, as follows:

Continuous multiple address write(write)[**Group 1**:1000%position;20%force;10%speed **Group 2**:100%position;20%force;2%speed **Group 3**:0%position;100%force;5%speed **Group 4**:592%position;100%force;10%speed]:

Send: 01 10 0405 000C 18 03e8 0014 000A 0100 0014 0002 0000 0064 0005 0250 0064  
000a 9f 44

Return: 01 10 04 05 00 0C D1 3D

## 3 I/O Control

The I/O mode is a common control method in industry.

The grippers will monitor the pin states of Input 1 and Input 2 (0V and high resistance states). Input 1 controls the **position** and Input 2 controls the **angle**. You can control this gripper through changing the states of Input 1 and Input 2. As shown in Table 3.1(a) and Table 3.1(b).

Table 3.1(a) Input 1 State

| Pinout  | Function | INPUT 1         | Pin state | Perform action                                  |
|---------|----------|-----------------|-----------|---|
| INPUT 1 | Position | High resistance | 0         | Target position 1,target force 1,target speed 1 |
|         |          | 0V              | 1         | Target position 2,Target Force 2,Target Speed 2 |

Table 3.1(b) Input 2 State

| Pinout  | Function | INPUT 1         | Pin state | Perform action                                       |
|---------|----------|-----------------|-----------|--|
| INPUT 2 | Rotation | High resistance | 0         | Rotation angle 1, rotation speed 1, rotation force 1 |
|         |          | 0V              | 1         | Rotation angle 2, rotation speed 2, rotation force 2 |

The input pin controls the position and rotation, and the **two pins have sequence**. According to the actual situation, they can confirm whether they move first and then rotate or rotate and then move. You can also get the gripper state by detecting the states of Output1 and Output 2(0V and high resistance states). as shown in Table 3.2.

Table 3.2 Output1 Output2 State

| I/O State (OUT1 OUT2) | State description   |
|-----------------------|---|
| 0 0                   | Fingers are in motion   |
| 1 0                   | Fingers are at reference position,<br>No object detected or object has been dropped |
| 0 1                   | Fingers have stopped due to an object detection                                     |

### NOTE

- Please make sure that the I/O hardware type of the gripper is compatible with your controller's.

The four states of IO mode can be configured through Modbus RTU protocol of RS485, or the parameters of gripper can be configured through our debugging software. Please refer to the previous section for specific configuration mode. After the four groups of parameters are configured, the gripper can be controlled by setting the Input 1 and Input 2 pin states, and the grip state can be obtained by detecting the Output 1 and Output 2.

## 3.1 Wiring

In I/O control mode, there are six wires need to be connected, including Input 1, Input 2, 24 V, Output 2, Output 1, GND. Refer to Table 3.3 for specific line sequence and color.


The gripper's Output pin should be connected to the Controller's Input pin. And the gripper's Input pin should be connected to the Controller's Output pin.

Table 3.3 wire Description

| Wire color | Description |
|------------|-------------|
| Brown      | INPUT 2     |
| White      | INPUT 1     |
| Blue       | 485_B       |
| Black      | 485_A       |
| Red        | 24 V        |
| Grey/Pink  | GND         |
| Yellow     | OUTPUT 1    |
| Green      | OUTPUT 2    |

## 3.2 I/O Setting

The diagram of IO operation steps is as follows:

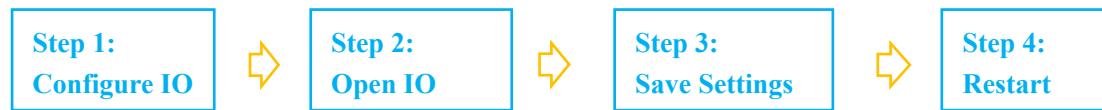

### 3.2.1 Configure IO

Connect 24 V, GND and 485\_A and 485\_B. Then you can use **I/O Parameter Configuration** to configure four groups of IO parameters .It is recommended to use serial port debugging software at PC for configuration. IO parameters are configured as continuous address, and 12 groups of data including 0x0405-0x0410 need to be set.

You can configure the IO parameters of the gripper in two ways, as follows:

**The first way:**

Use the test software of the gripper for configuration. As shown in figures 3.1 (a) and 3.1 (b)

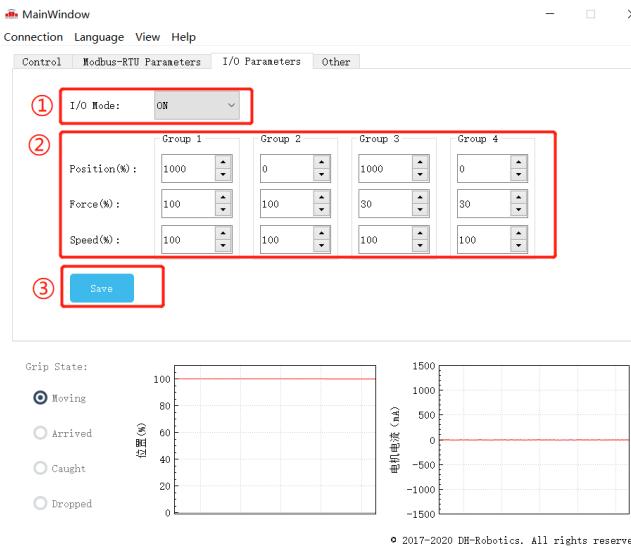


Figure 3.1 (a)Graphical configuration

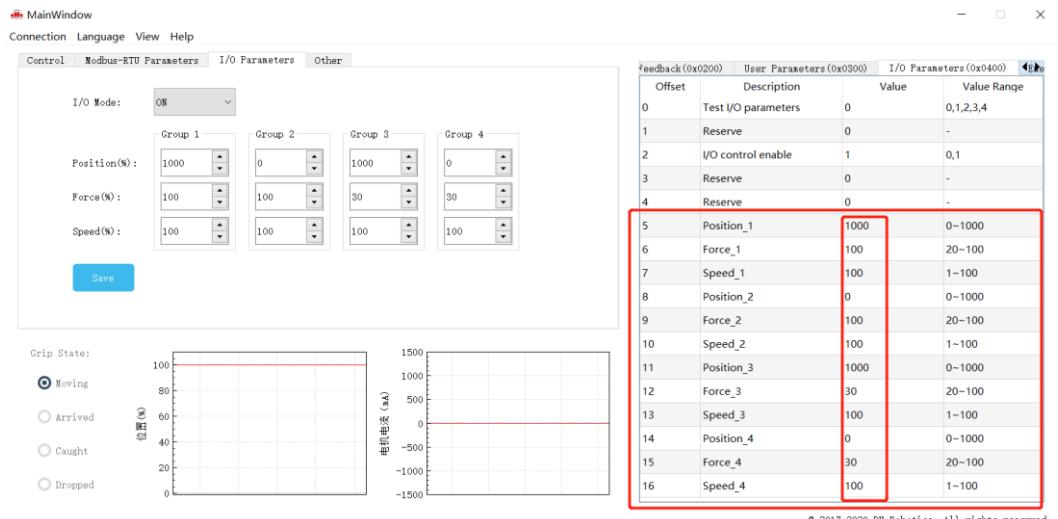


Figure 3.1 (b) Test software register configuration

### The second way:

You can use continuous multiple register write 10 (HEX):

Send: 01 10 0405 000C 18 03e8 0014 000A 0100 0014 0002 0000 0064 0005 0250 0064 000a  
9f 44

Receive: 01 10 04 05 00 0C D1 3D

### 3.2.2 Open IO

Turn on the IO mode switch and write 01 at the register of 0x0402 to open it, as shown below:

The specific instructions are as follows:

Send: 01 06 04 02 00 01 E8 FA

Return: 01 06 04 02 00 01 E8 FA

### 3.2.3 Save Settings

Save the configured parameters, and write 01 at the register of 0x300 for saving.

Send: 01 06 03 00 01 48 4e

Return: 01 06 03 00 01 48 4e

### 3.2.4. Restart

After power off, you can connect the input and output to the corresponding equipment, and power on after confirming that the wiring is correct. The gripper will be initialized automatically. Then the gripper is controlled according to the input signal, and the running state is feedback through output.